

Preset channels - modeX

NB! Channel 0-19 can be changed manually.

H, J, N and S channels are not yet programmed on modeX Receiver. In order to receive any of these, please program one of the channels 0-19 to the closest possible frequency.

Channel	Frequency
0	216,000
1	216,250
2	216,500
3	216,750
4	170,000
5	171,000
6	172,000
7	173,000
8	177,000
9	178,000
10	179,000
11	180,000
12	181,000
13	182,000
14	183,000
15	188,000
16	189,000
17	190,000
18	191,000
19	192,000
20	169,400
21	169,425
22	169,450
23	169,475
24	169,500
25	169,525
26	169,550
27	169,575
28	169,675
29	169,725
30	169,775
31	169,825
32	173,975
33	174,000
34	173,950
35	173,825
36	174,125
37	174,425
38	174,600
39	174,775
40	175,000
41	175,350

Channel	Frequency
42	175,500
43	175,700
44	175,900
45	176,000
46	176,225
47	176,450
48	176,675
49	176,900
50	177,125
51	177,350
52	177,575
53	177,800
54	183,700
55	183,950
56	184,200
57	184,450
58	184,700
59	184,950
60	185,200
61	185,450
62	185,700
63	185,950
64	186,200
65	186,450
66	186,700
67	186,950
68	187,200
69	187,450
70	187,450
71	194,450
72	208,000
73	208,250
74	208,500
75	208,750
76	209,000
77	209,250
78	209,500
79	209,750
80	210,000
81	210,250
82	210,500
83	210,750

Channel	Frequency
84	211,000
85	211,250
86	211,500
87	211,750
88	213,000
89	213,250
90	213,500
91	213,750
92	214,000
93	214,250
94	214,500
95	214,750
96	215,000
97	215,250
98	215,500
99	215,750
H02	173,4000
H03	173,4650
H05	173,6400
H06	174,6000
H11	173,6950
H16	174,1200
H20	174,4150
H33	173,9900
H34	173,9625
H35	173,8125
H42	169,5125
H43	169,5250
H44	169,5625
H46	169,7750
J19	187,4500
J25	194,4500
N01	216,0125
N09	216,2125
N22	207,8500
S19	173,4650
S23	173,5450
S26	174,6400
S28	173,6950
S31	173,7550
S51	174,4100
S61	174,7700

